

Yb = Distance between VE flange and
speed-control lever in rated speed
position
Measurement point = edge of control
lever on distributor-head end

